5. Install the access panel. Refer to the "Installing the Access Panel" section in Chapter 2, "Installing the Server Blade and Options."
6. Install the server blade in the server blade enclosure. Refer to the "Installing a Server Blade" section in Chapter 2, "Installing the Server Blade and Options."
7. Power up the server blade. Refer to the "Powering Up the Server Blade" section in Chapter 2, "Installing the Server Blade and Options."
8. Run RBSU to reconfigure the system with the new battery. Refer to the "ROM-Based Setup Utility" section in Chapter 3, "Configuring and Deploying Server Blades."

© 2016. All Rights Reserved.
Acer ProDock Wireless User Manual

This revision: March 2016

Downloaded from www.Manualslib.com manuals search engine

ACCESS LEVEL CONTROL

Description

Use this function to manually enable/disable access authority levels assigned to users. This function can be used to temporarily disable a user's access level instead of deleting and adding the user.

❑ **I have this feature.**

❑ **I do not have this feature.**

Using Access Level Control

1. Ensure the display shows idle disarmed text.
2. Press the **MENU** key to enter the Function List, then press **NEXT** repeatedly until you reach the ***CHANGE LEVEL CTL?*** prompt. Press **ENT**.
3. ***ACCESS LEVEL CTL*** is displayed to remind you that you are affecting the authority levels of cards/tokens and not passcodes. Press ENT.
4. ***ENTER LEVEL:*** is displayed. Enter the access authority level number and press **ENT**.
5. If the access level is currently disabled, ***LEVEL # ENABLE?*** is displayed. If the access level is currently enabled, ***LEVEL # DISABLE?*** is displayed. Press **ENT** to accept the choice. ***ENTER LEVEL:*** is displayed again. When you are finished, press **ESC**.

Downloaded from www.Manualslib.com manuals search engine

circuit rating. If power strips are used, the load should not exceed 80% of the power strip's input rating.

- This product's AC adapter is equipped with a three-wire grounded plug. The plug only fits in a grounded power outlet. Make sure the power outlet is properly grounded before inserting the AC adapter plug. Do not insert the plug into a non-grounded power outlet. Contact your electrician for details.

Warning! The grounding pin is a safety feature. Using a power outlet that is not properly grounded may result in electric shock and/or injury.

Note: The grounding pin also provides good protection from unexpected noise produced by other nearby electrical devices that may interfere with the performance of this product.

- Use the product only with the supplied power supply cord set. If you need to replace the power cord set, make sure that the new power cord meets the following requirements: detachable type, UL listed/CSA certified, type SPT-2, rated 7 A 125 V minimum, VDE approved or its equivalent, 4.6 meters (15 feet) maximum length.

Product servicing

Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks. Refer all servicing to qualified service personnel.

Unplug this product from the wall outlet and refer servicing to qualified service personnel when:

- the power cord or plug is damaged, cut or frayed
- liquid was spilled into the product
- the product was exposed to rain or water
- the product has been dropped or the case has been damaged
- the product exhibits a distinct change in performance, indicating a need for service
- the product does not operate normally after following the operating instructions

Note: Adjust only those controls that are covered by the operating instructions, since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal condition.

Downloaded from www.Manualslib.com manuals search engine

WiFi (Wireless) Setup

Your modem's WiFi has been pre-configured. You'll find the WiFi network name (SSID) and password (Wireless Key) printed on a sticker on the back of your modem.

1. Make sure that WiFi is enabled on your computer, tablet, smartphone or other WiFi device.
2. View the list of available WiFi networks on your WiFi device and select the network that matches the network name on your modem's sticker.
3. Enter the WiFi password (wireless key) exactly as printed on the sticker on the back of your modem.

Note: You may notice there are two WiFi networks present. You may connect to either of these, however most devices will only be compatible with the 2.4GHz network. See the sticker on your modem for more network details.

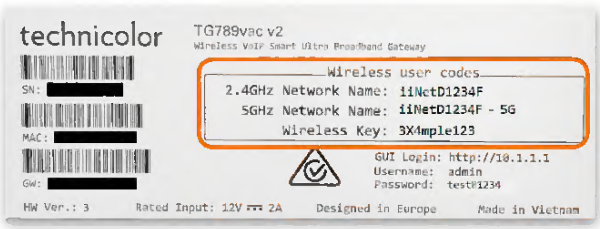

Downloaded from www.Manualslib.com manuals search engine

Start
Remove the back cover
Put in the SIM cards
Put in the optional memory card
Power on
Dual SIM card settings (for dual SIM phones)
Battery life
Sign in
Old phone to new phone
Google Play™

Dual SIM card settings (for dual SIM phones)

With a dual SIM phone, you can use one or two SIM cards. If there's only one SIM in the phone, it's ready to use. With two cards inserted, you can use either or both.

To set up your phone to use two SIM cards, insert both cards, turn on your phone, and follow the prompts. To finish dual SIM setup, drag down the status bar at the top of the home screen and touch **Welcome to your dual SIM**.

Tip: With two SIM cards, you see at the top of your home screen.

Dual SIM with intelligent calling

Your phone learns your usage patterns to choose the best SIM for an outgoing call. You phone automatically prompts you in the status bar to enable this feature. Or, you can enable it anytime by touching Apps → **Settings** → **Dual SIM settings** → **Call settings** → **Automatic SIM selection**.

Battery life

Your phone is like a small computer, giving you tons of information and apps, at lightning fast speed. Depending on what you use, that can take a lot of power.

To see what's using up battery power, touch Apps → **Settings** → **Battery**.

Tips & tricks

To save even more battery life between charges, you could reduce:

- Wi-Fi and Bluetooth® use: Touch Apps → **Settings**, then touch the switch next to **Wi-Fi** or **Bluetooth** to turn them OFF when you don't need them.
- GPS use: Touch Apps → **Settings** → **Location** → **Mode** → **Battery saving** to turn off GPS tracking.
- Display brightness: Touch Apps → **Settings** → **Display** → **Brightness** → (slide dimmer setting left), if you don't want to use the automatic light sensor.
- Display timeout delay: Touch Apps → **Settings** → **Display** → **Sleep** → (shorter setting).
- Widgets that stream information to your home screen, like news or weather.
- Unused online accounts that you registered: Touch Apps → **Settings**. Go to the **ACCOUNTS** section, and touch the one you want to remove. Touch it again, then touch Menu → **Remove account**.
- Recording or watching videos, listening to music, or taking pictures.

Downloaded from www.Manualslib.com manuals search engine

SGA. When a shadow thread must write to the database, it writes into the SGA only. At a later time the DBWR writes this "dirty" data out to disk.

Parallel execution begins with a shadow thread executing a SQL statement that contains operations, some of which may be performed in parallel. This becomes the shadow parallel coordinator. It dispatches the execution of a statement to several parallel server threads and coordinates the results from the parallel server threads to send the results back to the user. The number of parallel server threads assigned to a single operation is called the "degree of parallelism".

The redo log contains a history of all committed transactions for the database to perform an instance recovery. A minimum of two redo logs is required and more may be used. When a redo log fills, a log switch occurs. At log switch time all new redo information goes to the next redo log file in line. If the system is running in ARCHIVELOG mode, which is recommended, the previous log file is copied out to an archive log file.

With a recent backup, the redo log files, and the redo log archive files, the database can be recovered if needed. The control and configuration files are used to store information of the state and layout of the database as well as system tunables. A more in-depth discussion of the Oracle8 Server architecture can be found in the *Oracle8 Server Concepts Manual.*

© 1998 Compaq Computer Corporation, All Rights Reserved

Downloaded from www.Manualslib.com manuals search engine

6.10.3.4 Counter Modes for ProfileMe Mode

Table 6–14 shows the counter modes that are used with ProfileMe mode.

Table 6–14 ProfileMe Mode PCTR_CTL Input Select Fields

SL0[4]	SL1[3:2]	PCTR0	PCTR1
1	00	Retired instructions	Cycle counting
1	01	Cycle counting	Inum retire delay
1	10	Retired instructions	Bcache miss or long latency probes
1	11	Cycle counting	Mbox replay traps

Downloaded from www.Manualslib.com manuals search engine

6. If experiencing difficulty with this equipment, please contact ADTRAN for repair and warranty information. If the equipment is causing harm to the network, the telephone company may request this equipment to be disconnected from the network until the problem is resolved or it is certain that the equipment is not malfunctioning.
7. This unit contains no user serviceable parts.
8. The FCC recommends that the AC outlet to which equipment requiring AC power is to be installed is provided with an AC surge arrester.

Downloaded from www.Manualslib.com manuals search engine

4. From the "**Display properties**" window, select the "**Settings**" tab. Click the "**Advanced Properties**" button in the bottom right corner.

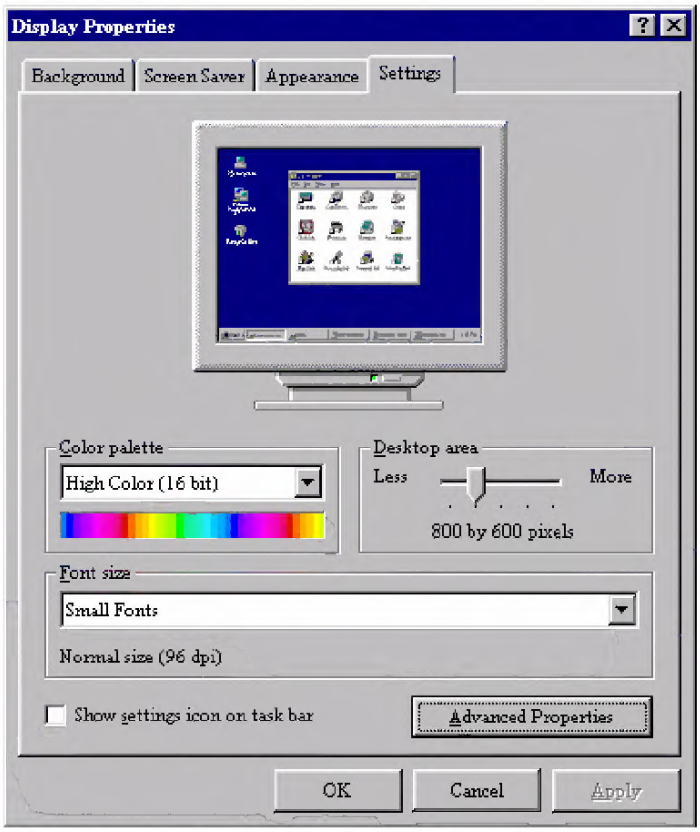

5. Select the "**Monitor**" tab. Click the "**Change**" button in the top right corner.

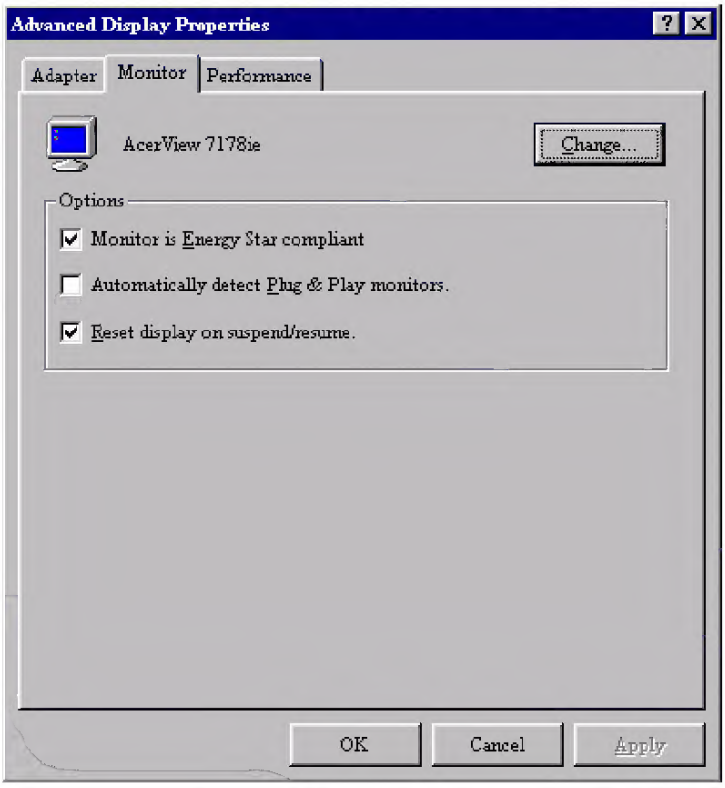

Downloaded from www.Manualslib.com manuals search engine

SUBTITLE SETUP

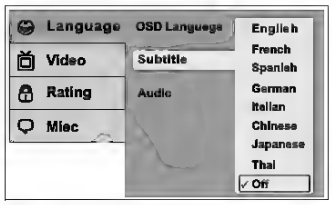

Select "SUBTITLE" using ▲▼button, then press ▶button to enter the Sub menu. Select the subtitle you desire using ▲▼button, then press "ENTER" to confirm the setting. Press ◀button to return.

Note The subtitle selection is only available for discs that are recorded in the above listed languages If the selected, language is not available, the player will play and display on the screen the original language contained in the disc

AUDIO SETUP

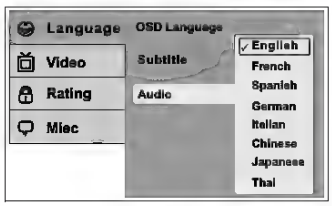

Select "AUDIO" using ▲▼button, then press ▶button to enter the Sub menu. Select the audio you desire using ▲▼button, then press "ENTER" to confirm the setting. Press ◀button to return.

Note: The audio selection is only available for discs that are recorded in the above listed languages If the selected, language is not available, the player will play and display on the screen the original language contained in the disc

VIDEO SETUP

TV Display

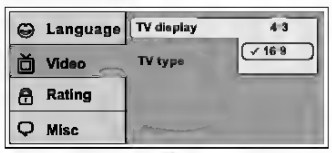

The TV DISPLAY setup allows you to adjust screen setting (aspect ratio).

4:3

This displays the wide picture with black bands on the upper and lower portions of the screen.

16:9

This displays a wide picture with black bands on the upper and lower portion of the screen. The bandwidth will vary, depending on the aspect ratio of the disc.

TV Type

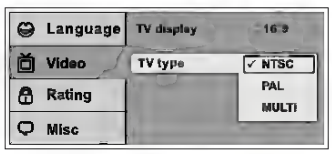

The TV TYPE setup allows you to select the system to fit to the color system of the TV to be connected.

NTSC - Select this type for NTSC TV

PAL - Select this type for PAL TV

MULTI - Select this type for multi-system TV

Downloaded from www.Manualslib.com manuals search engine

Initial Cleaning

Before using the oven for the first time you should clean it thoroughly.

Caution: Do not use any caustic, abrasive cleaners! The surface could be damaged.

To clean metal fronts use commercially available cleaning agents.

1. Turn the oven function switch to oven lighting.
2. Remove all accessories and the shelf support rails and wash them with warm water and washing up liquid.
3. Then wash out the oven with warm water and washing-up liquid, and dry.
4. Wipe the front of the appliance with a damp cloth.

Downloaded from www.Manualslib.com manuals search engine

INSTRUMENT PANEL

1. Lighting Control Lever (P.2-75)/ Turn Signal Control Lever (P.2-81)
2. Instrument Cluster (P.2-56)
3. Windshield Wiper and Washer Lever (P.2-82)/Rear Window Wiper and Washer Switch (P.2-84)
4. Headlight Leveling Switch (if equipped) (P.2-80)/ Headlight Washer Switch (if equipped) (P.2-81)
5. Front Fog Light Switch (if equipped) (P.2-80)
6. Fuse Box (P.7-33)
7. Engine Hood Release Handle (P.5-72)
8. "ENG A-STOP OFF" Switch (if equipped) (P.3-25)
9. ESP® OFF switch (P.3-32)
10. Hands-free Switches (if equipped) (P.5-44, 5-56)
11. Ignition Switch (Vehicle without Keyless Push Start System) (P.3-3)
12. Engine Switch (Vehicle with Keyless Push Start System) (P.3-5)

EXAMPLE

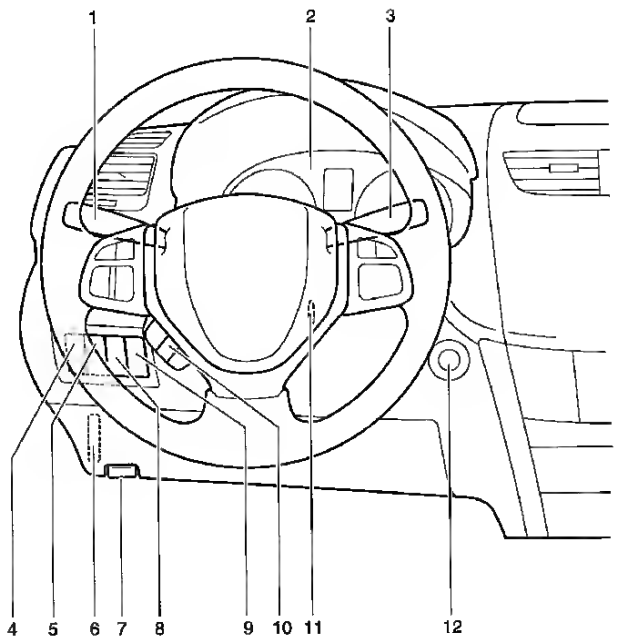

68LM70003

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Chapter 1 Contents

1.1 Features 1-1
1.2 2.5-inch HDD 1-10
1.3 DVD Super Multi (+-R Double Layer) 1-11
1.4 Power Supply 1-12
1.5 Batteries 1-14
1.5.1 Main Battery 1-14
1.5.2 Battery Charging Control 1-14
1.5.3 RTC Battery 1-15

Downloaded from www.Manualslib.com manuals search engine

Cabinet Dimensions – 25, 30 and 35 Pound Models

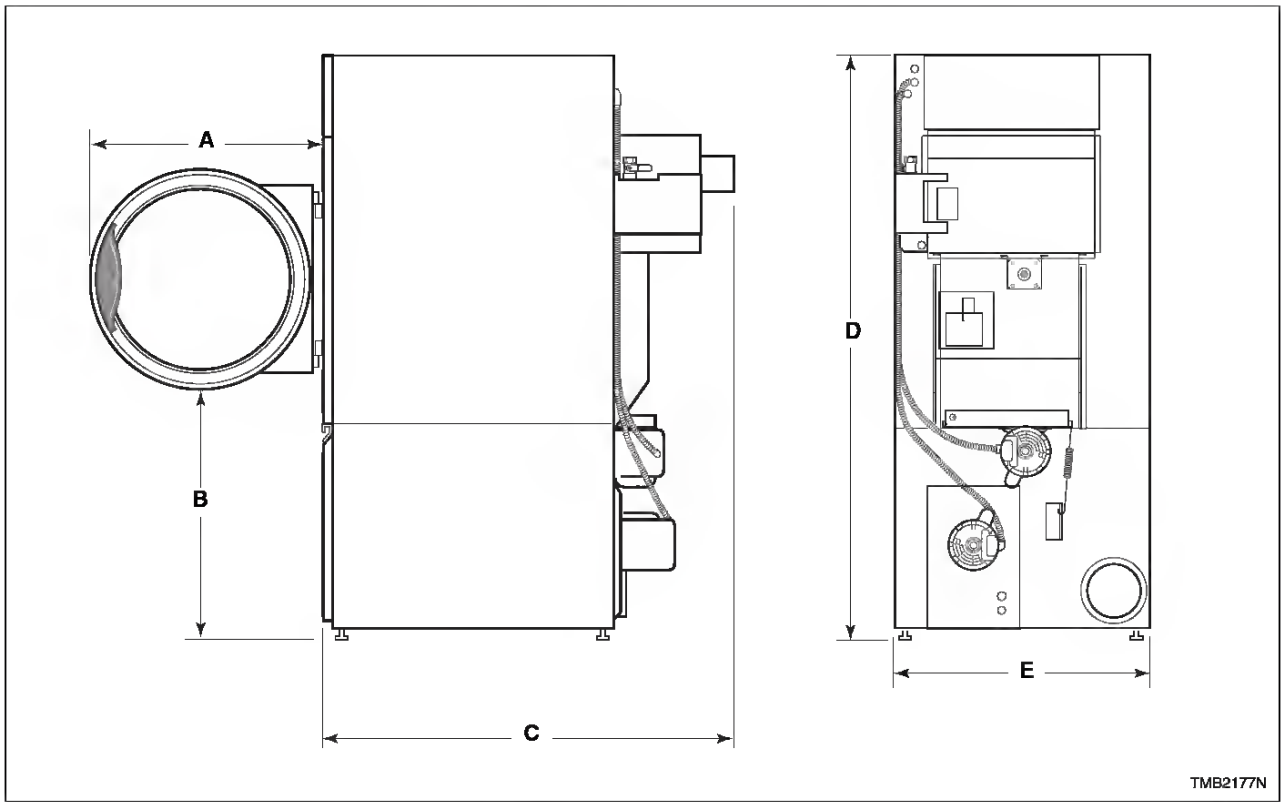

Models	A	B	C	D	E
25 Pound	26.25 in. (667 mm)	27.5 in. (699 mm)	40.875 in. (1038 mm)	63.875 in. (1622 mm)	28 in. (711 mm)
30 Pound	26.25 in. (667 mm)	27.5 in. (699 mm)	46.875 in. (1191 mm)	63.875 in. (1622 mm)	28 in. (711 mm)
35 Pound	28 in. (711 mm)	27.5 in. (699 mm)	46.875 in. (1191 mm)	63.875 in. (1622 mm)	31.5 in. (800 mm)

NOTE: Facia panels available to increase height of single pocket models to 72.25 inches (1835 mm) and 76.25 inches (1938 mm).

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

2. Press the delay touchpad again and again until the display shows the delay time you want to set (from 1 to 24 hours).
   - The delay time flashes in the display.
   - The delay indicator is on.
3. Close the appliance door. The countdown starts.
   - If you open the door, the display shows the countdown of the delay start that decreases with steps of 1 hour.

- When the countdown is completed, the programme starts.

Opening the door while the appliance operates

If you open the door, the appliance stops. When you close the door, the appliance continues from the point of interruption.

Cancelling the delay start while the countdown operates

1. Open the appliance door.
2. Press the delay touchpad again and again until the display shows the programme number.
3. Close the appliance door. The programme starts.

Cancelling the programme

Press **RESET** until:

- The display shows two horizontal status bars.

Make sure that there is detergent in the detergent dispenser before you start a new programme.

At the end of the programme

When the programme is completed, an intermittent acoustic signal operates.

1. Open the appliance door.
   - The end indicator is on.
   - The display shows **0**.
2. Press the on/off button to deactivate the appliance.
3. Close the water tap.

If you do not press the on/off button, the **AUTO OFF** device automatically deactivates the appliance after some minutes. This helps to decrease the energy consumption.

- For better drying results, keep the appliance door ajar for some minutes.
- Let the dishes become cold before you remove them from the appliance. Hot dishes can be easily damaged.
- First remove the items from the lower basket, then from the upper basket.

There can be water on the sides and on the door of the appliance. Stainless steel becomes cool more quickly than the dishes.

Downloaded from www.Manualslib.com manuals search engine

6. Release ENTER when the correct number appears.
7. Press ENTER again and hold it down to change the ones position in minutes (the fourth digit from the left).
   The digits cycle from 0 to 9 as you hold down ENTER.
8. Release ENTER when the correct number appears.
9. Press TIME twice.
   The number you just entered should appear in the display as the current time.

HIGHS AND LOWS

The Weather Wizard III records highs and lows for many of its functions. Highs and lows are maintained until you manually clear the entries, or until power is interrupted. Depending on how often you clear highs and lows you can track daily, weekly, monthly, yearly, or all-time highs and lows.

	RECORDED HIGH	RECORDED LOW
Inside Temperature	√	√
Outside Temperature	√	√
Wind Speed	√	X
Wind Direction	X	X
Wind Chill	X	√

In general, highs and lows are displayed by pressing RECL (RECALL) once or twice. The high or low appears in the display along with the word HIGH or LOW and the words which normally accompany the function (e.g., OUTSIDE and TEMPERATURE for outside temperature). Specific instructions for displaying highs and lows may be found within the instructions for each function.

Highs and lows are stored in memory along with the time and the date at which they occurred. To see what time a high or low was recorded, wait a few seconds after pressing RECL. The time the high or low occurred will appear. Wait a few more seconds and the date will appear.

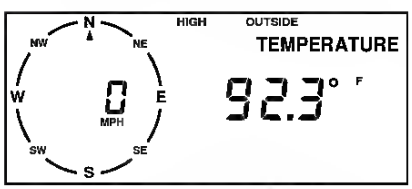

High Outside Temperature: 92.3° F

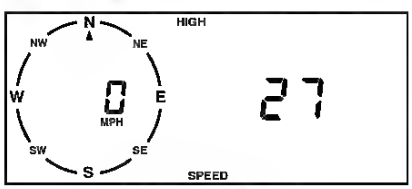

High Wind Speed: 27 mph

TYPICAL HIGH AND LOW DISPLAYS

Downloaded from www.Manualslib.com manuals search engine

What to do if...

Remedying small malfunctions

If during use of the appliance one of the following error codes is shown in the multi-display:
– E 10 (Problems with water inflow),
– E20 (Problems with water outflow),
– E40 (door open),
please have a look at the following table.
When the fault is remedied, press the ⏻/⏷ button (START/PAUSE).
In the event of other errors (E and a number or letter): Switch the appliance off and then on again. Re-set the programme. Press the ⏻/⏷ button (START/PAUSE).
If the error appears again, please contact the Customer Care Department, stating the error code.

Problem	Possible cause	Remedy
Washing machine is not working.	Mains plug not plugged in or fuse not working.	Connect the plug to a mains socket. Check fuse.
	Door not closed properly.	Close door - there should be an audible click.
	The ⏻/⏷ button (START/PAUSE) button was not pressed for long enough.	Press the ⏻/⏷ button (START/PAUSE).
The door cannot be closed.	Child safety device engaged.	Release the child safety device.
When a button is pressed, Err appears in the multi-display.	The selected function cannot be combined with the programme set.	Select another function.
E40 appears. →| indicator (END) flashes 4x, at the same time an acoustic signal sounds 4x.	The door is not closed properly.	Close the door properly. Restart the programme.
E 10 appears. →| indicator (END) flashes 1x, at the same time an acoustic signal sounds 1x. (Problems with water inflow)	Tap turned off.	Turn on the tap.
	The filter in the threaded inlet hose fitting is blocked.	Turn off the tap. Unscrew the hose, take out the filter and clean it.
	Water tap is furred with lime scale or is faulty.	Check the tap and have it repaired, if necessary.

Downloaded from www.Manualslib.com manuals search engine

Preparation Procedures

WARNING: Only authorized technicians trained by Compaq should attempt to repair this equipment. Because of the complexity of the individual boards and subassemblies, no one should attempt to make repairs at the component level or to make modifications to any printed wiring board. Improper repairs can create a safety hazard.

CAUTION: Electrostatic discharge (ESD) can damage electronic components. Be sure that you are properly grounded (earthed) before beginning any installation procedure. Refer to "Electrostatic Discharge Information" earlier in this chapter for more information.

Powering Down the Server

Before beginning any removal and replacement procedure:

CAUTION: Failure to follow these directions could result in damage to equipment or loss of information.

1. Back up your server data and record configuration information.
2. Shut down the operating system as directed in your operating system instructions.
3. If necessary, power down the server by pressing the power button on the front of the server.

NOTE: To completely remove all power from the server, you must disconnect the power cord. The front panel power button may not completely shut down power to the server.

4. Disconnect and remove the AC power cord from the AC outlet, and then from the server.

WARNING: To reduce the risk of injury from electric shock or damage to the equipment when installing hardware, make sure that the power to the server is turned off. Remove any AC power cords to completely disconnect power from the system. The front panel power button may not completely remove power to the server.

5. Disconnect any other external equipment connections to the server.

Problem	Possible cause	Remedy
The door cannot be opened when the washing machine is switched on.	Door locked.	Wait until ⊸ indicator (DOOR) is lit green.
	There has been a power cut. (All indicators are off.) For safety reasons, the door remains locked for approx. 4 to 10 minutes.	The programme will continue when the power cut is over.
		To remove washing: If water can be seen in the appliance, before opening the door, first drain off the water. (See section "Carrying out an emergency drain".)
Washing is heavily creased.	Possibly too much washing was loaded.	Observe maximum loads.

If the wash results are not satisfactory

Washing is grey and scale is being deposited in the drum

- Too little detergent is being used.
- The right detergent was not used.
- Special soiling was not pre-treated.
- Programme or temperature was not correctly set.

There are grey stains on the washing.

- Washing soiled with ointment, grease or oil was washed with too little detergent.
- It was washed at too low a temperature.
- A common cause is that fabric conditioner – especially a concentrate – has got onto the washing. Such stains should be washed out as quickly as possible and make sure that you are careful when using fabric conditioner.

After the last rinse foam can still be seen.

- Modern detergents may create foam even in the last rinse cycle. The washing is however sufficiently rinsed.

There are white residues on the washing.

- This is due to the insoluble ingredients in modern detergents. They are not caused by insufficient rinsing. Shake or brush the washing. If possible turn the washing inside out before washing. Check your choice of detergent. Especially with dark colours it is advisable to use liquid detergents.

Downloaded from www.Manualslib.com manuals search engine

3 Click **"Apply"** to save your new settings.

To delete a power plan:

You cannot delete the power plan you are currently using. If you want to delete the active power plan, switch to another one first.

1 Select the power plan you wish to delete from the drop-down list.

2 Click the Delete Power Plan icon.

Battery status

For real-time battery life estimates based on current usage, refer to the panel in the upper half of the window. Click the to view estimated battery life in sleep and hibernate modes.

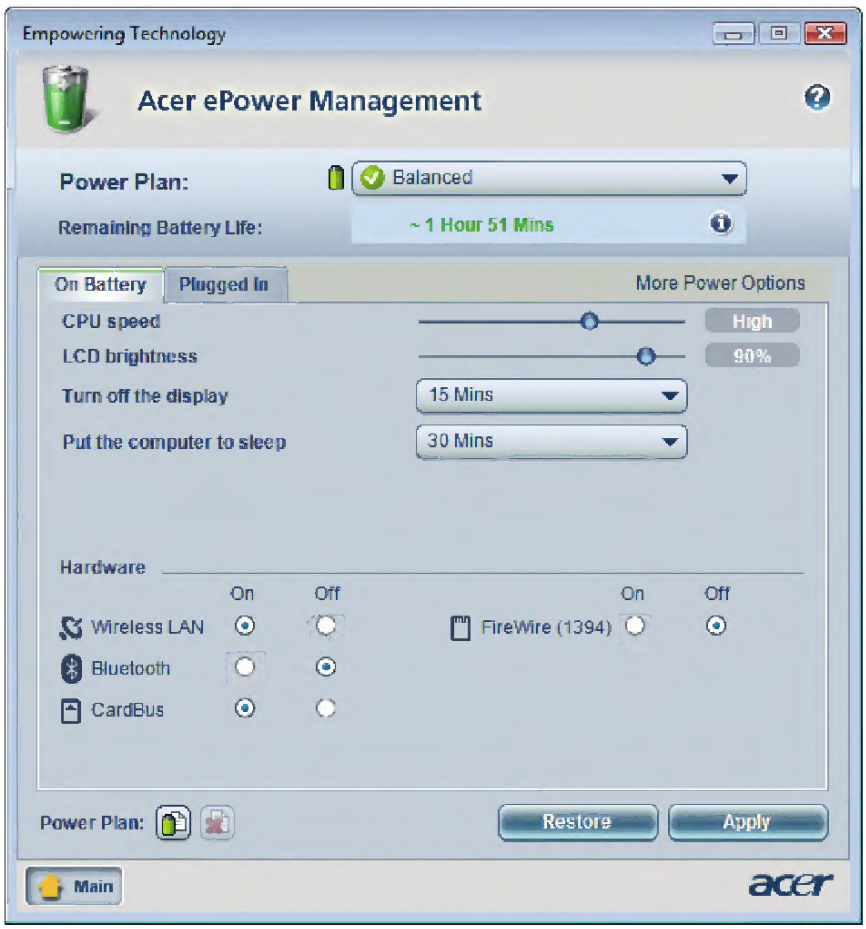

Downloaded from www.Manualslib.com manuals search engine

Combination cooking (Cooking and Grilling)

Programme	Food categories	Weight from - to	Comments
CG1	Chicken 1) (fresh)	200 - 2000 g	If cooking a dish weighing oven 500g, a triple bell rings halfway through cooktime to remind you to turn.
CG2	pork roast 2) (fresh)	400 - 1200 g	See above
CG3	Gratin 3)	200 - 2000 g	If cooking a dish weighing 200-500g you place the dish on the grill shelf

1) If working with a weight from 1000 - 1400g, please use a deep heat-resistant dish, set it directly on the turntable, do not cover. Set chicken pieces directly on the grill shelf.

2) The pork roast is cooked in a deep heat-resistant dish, set directly on the turntable. Do not cover.

3) Enter the total weight of the dish, for instance potatoes with cream sauce and cheese.

The automatic cook times are for refrigerated dishes (+5°C).
The weight can be set as follows:
- from 100 to 1000 g in 25 g steps,
- from 1000 to 2000 g in 50 g steps.

For all dishes not covered by automatic programmes, enter manually microwave output power and time according to cook tables.

How to use automatic programmes

Example : defrosting 1 kg

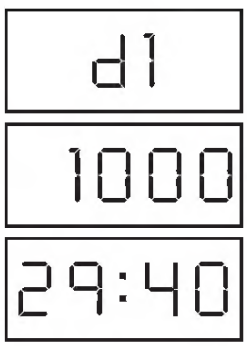

1. Press the button for automatic programmes **'PROGRAMME'** until the desired programme appears in the display.

2. Use the **Rotary knob** to set the weight.

3. Press the **START button 'START/QUICK'.** The display shows the necessary time.

4. If you want to modify the settings, you have to press the **Clear-button 'STOP'** and start again.

Midway through the programme, three short bells will be heard. Stir or turn the food item at this time. The oven does not switch off.

Downloaded from www.Manualslib.com manuals search engine

Autodefrost

- The Autodefrost by weight feature is an accurate defrosting method for frozen meat, poultry of fish.

Example: To defrost 400g of minced meat:

1. Touch Autodefrost pad	Auto Defrost	"dEF3" will be indicated in the display
2. Turn the Rotary knob to the right until 0.4 is indicated in the display		"0.4" will be indicated in the display
3. Touch Start pad	Start	Defrost time will count down.

Defrosting Tips

1. It is better to underestimate defrosting time if you are unsure. Food will continue to defrost during the standing time.
2. Separate food as soon as possible.
3. Turn large items, e.g. joints, halfway through the defrosting time.
4. Remove any thawed food as soon as possible.
5. Remove or open any packaging before defrosting.
6. Place food in a larger container than that which it was frozen in, this will allow for easy stirring.
7. Begin thawing poultry, breast side down and turn over halfway through defrosting time. Delicate areas such as wing tips can be shielded with small pieces of smooth foil.
8. Standing time is very important, particularly for large, dense foods which cannot be stirred to ensure that the centre is completely defrosted before cooking.

Programme	Min. weight	Max. weight
Fish, def 1	0,1 kg	2,0 kg
Poultry, def 2	0,1 kg	3,0 kg
Meat, def 3	0,1 kg	2,0 kg

Downloaded from www.Manualslib.com manuals search engine